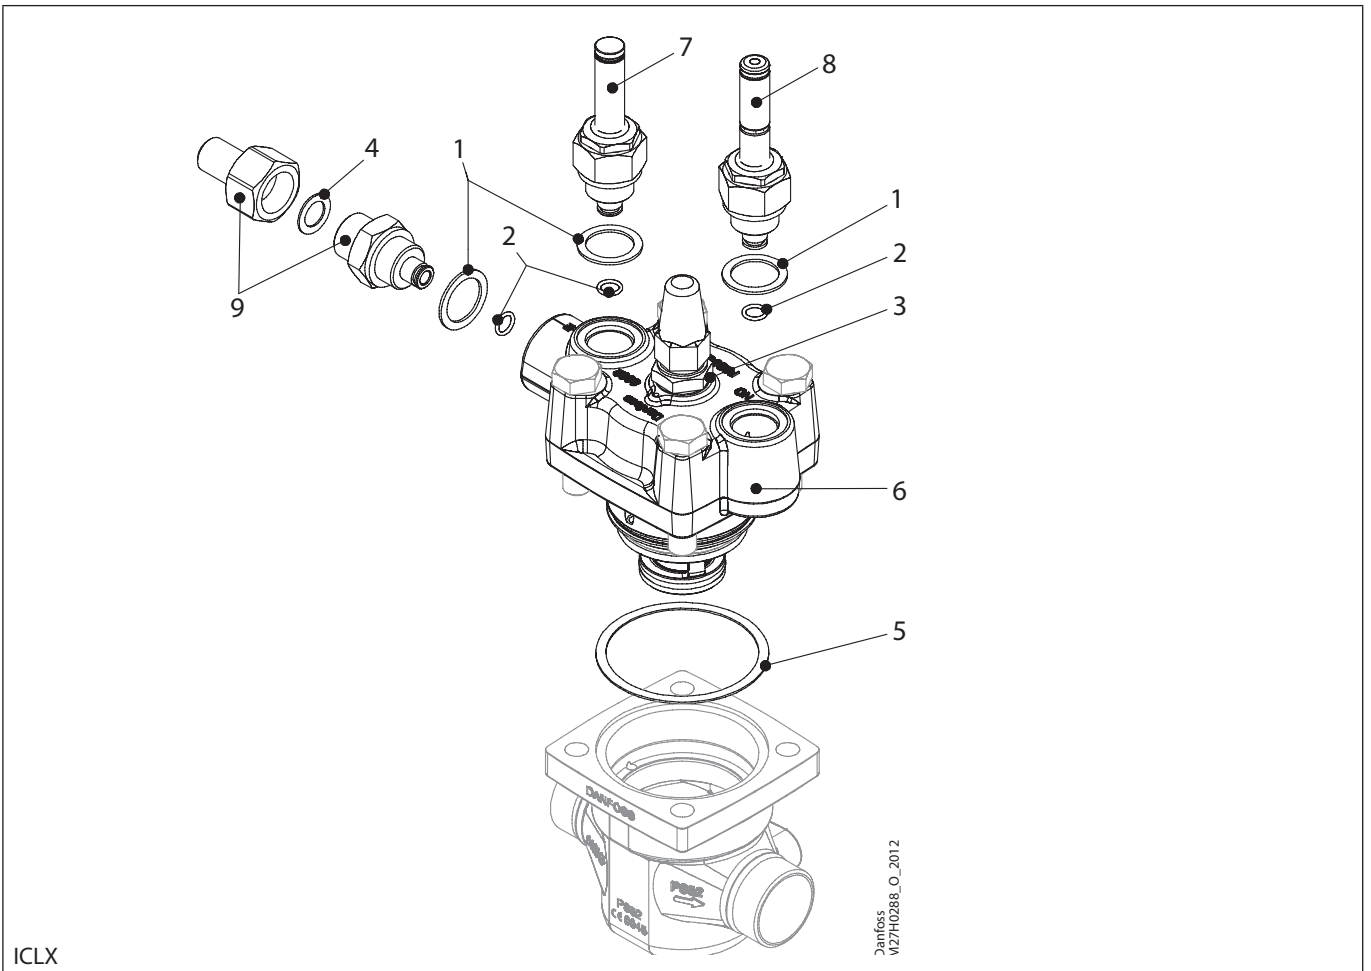


 

 
 
 
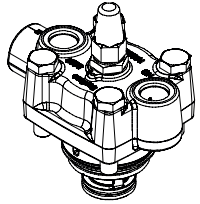
 
 
 
Installation guide – Spare parts and accessories

Overhaul kit | Code number 027H4204  
ICLX, size 40



ICLX

Danfoss  
W27H0288\_O\_2012

<p><b>1</b></p> <p> = Fibre</p> <p> <p>Total no. = 3</p> </p>	<p><b>2</b></p> <p></p> <p> <p>Total no. = 3</p> </p>	<p><b>3</b></p> <p> = Alu.</p> <p> <p>Total no. = 1</p> </p>	<p><b>4</b></p> <p> = Alu.</p> <p> <p>Total no. = 1</p> </p>	<p><b>5</b></p> <p> = Fibre</p> <p> <p>Total no. = 1</p> </p>
<p><b>6</b></p> <p></p> <p>Total no. = 1</p>	<p><b>7</b></p> <p></p> <p>Total no. = 1</p>	<p><b>8</b></p> <p></p> <p>Total no. = 1</p>	<p><b>9</b></p> <p></p> <p>Total no. = 1</p>	