

## FCZ

### Fan coil for universal and floor installation

Cooling capacity 0,65 ÷ 7,62 kW  
Heating capacity 1,45 ÷ 17,02 kW

- Very quiet
- Touch controller mounted on-board, allows remote control with smart devices



#### DESCRIPTION

fan coil can be installed in any 2/4 pipe system and operates with any heat generator even at low temperatures, and thanks to varied versions and settings, it is easy to pick the ideal solution for any need.

#### FEATURES

##### Case

Protective metal cabinet with anti-corrosion polyester RAL 9003 paint, whereas the head with the air distribution grille is in RAL 7047 plastic.

**Depending on the version, the distribution grille may be adjustable.**

##### Ventilation group

Consisting of double suction centrifugal fans that are particularly silent, statically and dynamically balanced, and directly coupled with the motor shaft.

The motor is wired for single phase and has three speeds, with capacitor. The motor is fitted on sealed for life bearings and is secured on anti-vibration and self-lubricating mountings.

Extractable shrouds for easy, effective cleaning

##### Heat exchanger coil

With copper pipes and aluminium louvers, the standard or oversized main coil and the possible secondary coil have female gas water connections on the left side and the manifolds have air vents.

The coil is not suitable for use in corrosive atmosphere or in environments where aluminium may be subject to corrosion.

**Reversibility of the water connections during installation only for units with a standard or boosted main coil, or standard with BV accessory. Not reversible in all other configurations. In any case, units with the coil water connections on the right are available at the time of ordering.**

##### Condensate drip

Provided standard in plastic and fixed to the interior structure; with external condensate discharge.

##### Air filter

Air filter class Coarse 25% for all versions easy to pull out and clean.

**In the APC version, air purification is guaranteed by the Cold Plasma purifier.**

The purifier is able to reduce pollutants, decomposing their molecules using electrical charges, causing the water molecules in the air to split into positive and negative ions. These ions neutralise the molecules in the gaseous pollutants, obtaining products normally present in clean air. The device is able to eliminate 90% of the bacteria. The result is clean, ionized air, free of foul odours.

#### Versions

**A** High, with fixed air distribution grille and built-in command

**ACT** High, with air distribution grille and electronic thermostat

**AF** High, without built-in command but with front intake

**APC** High, with air distribution grille, electronic thermostat and Cold Plasma purifier



**AS** High, with air distribution grille without built-in command

**U** Universal, with adjustable air distribution grille but without built-in thermostat

**UA** Universal, with fixed air distribution grille but without built-in thermostat

**UF** Universal, with adjustable air distribution grille but without built-in thermostat and with front intake grille

### Versions with fixed grille (high cabinet)

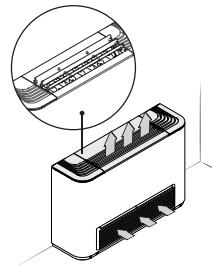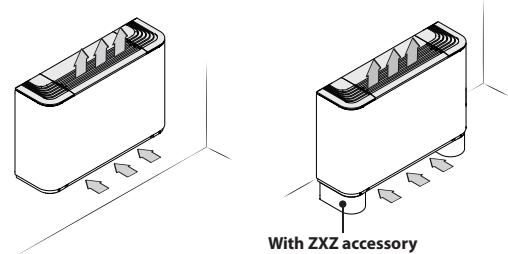

#### **FCZ\_A**

- With built-in selector.

#### **FCZ\_AS**


- Compatibility with VMF system.
- Without installed switch

#### **FCZ\_ACT**

- With electronic thermostat for 2-pipe systems only.

#### **FCZ\_APPC**


- With electronic thermostat for 2-pipe systems only.
- Cold Plasma purifier

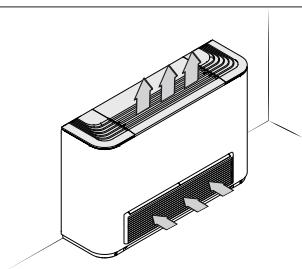

#### **FCZ\_AF**

- Without installed switch
- Compatibility with VMF system.
- Front intake grille.

### Versions with adjustable and fixed grille (universal)

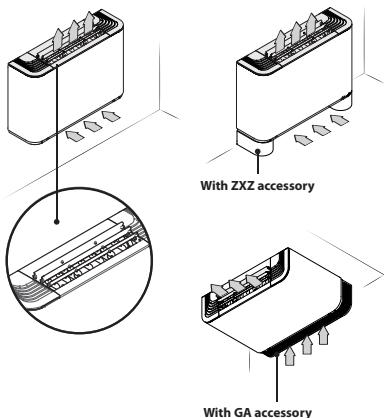

#### **FCZ\_U**

- Compatibility with VMF system.
- Without installed switch
- Distribution grille with adjustable louvers. Sizes 1, 2 and 3 have a single grille, whereas sizes 4, 5, 6, 7, 8, 9 and 10 have three grilles fully independent of each other. When all the fins have closed, the unit switches off.
- Vertical and horizontal installation for 2-pipe and 4-pipe systems.

#### **FCZ\_UA**

- Compatibility with VMF system.
- Without installed switch
- Air distribution grille with fixed louvers.
- Vertical and horizontal installation for 2-pipe and 4-pipe systems.

#### **FCZ\_UF**

- Compatibility with VMF system.
- Without installed switch
- Air delivery grille with adjustable louvers.
- Front intake grille.

### GUIDE TO SELECTING THE POSSIBLE CONFIGURATIONS

Field	Description
1,2,3	<b>FCZ</b>
4	<b>Size</b> 1, 2, 3, 4, 5, 6, 7, 8, 9, 10
5	<b>Main coil</b> 0 Standard 5 Oversized
6	<b>Secondary coil</b> 0 Without coil 1 Standard 2 Oversized
7	<b>Version</b> <b>Only vertical installation.</b> A High, with fixed air distribution grille and built-in command ACT High, with air distribution grille and electronic thermostat AF High, without built-in command but with front intake APC High, with air distribution grille, electronic thermostat and Cold Plasma purifier AS Free standing without installed switch <b>Vertical and horizontal installation.</b> U Universal, with adjustable air distribution grille but without built-in thermostat UA Universal, with fixed air distribution grille but without built-in thermostat UF Universal, with adjustable air distribution grille but without built-in thermostat and with front intake grille

## SIZE AVAILABLE FOR VERSION

Size	100	101	102	150	200	201	202	250	300	301	302	350	400	401	402	450	500	501	502	550
Versions produced (by size)	A,AS,U,UA	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
Versions available (by size)	ACT,APC	.	-	-	.	.	-	.	.	-	-	.	.	-	-	.	.	-	-	.
	AF,UF	.	-	-	.	.	-	.	.	-	-	.	.	-	-	.	.	-	-	.
Size	600	601	602	650	700	701	702	750	800	801	802	850	900	901	950	1000	1001			
Versions produced (by size)	A,AS,U,UA	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
Versions available (by size)	ACT,APC	.	-	-	.	.	-	.	.	-	-	.	.	-	-	.	.	-	-	.
	AF,UF	-	-	-	-	-	-	-	-	-	-	-	-	-	-	.	.	-	-	.

## ACCESSORIES

### Control panels

**AER503IR:** Flush-mounting thermostat with backlit display, capacitive keypad and infrared receiver, for controlling both brushless fan coils and those with an asynchronous motor. In 2-pipe systems, the thermostat can control standard fan coils or those equipped with an electric heater, with air purifying devices (Cold Plasma and germicidal lamp), with radiant plate or with FCZ-D twin delivery (Dualjet). In addition, it can control systems with radiant panels or mixed (fan coil and radiant floor) systems. Being equipped with an infrared receiver, it can, in turn, be controlled by the VMF-IR remote control.

**PX2Z:** On-board electromechanical switch.

**SAS:** air probe kit (L = 15 m) with probe-locking cable grommet.

**SIT3:** Thermostat Interface Card allowing the creation of a network of fan coils (max. 10) commanded by a central control panel (selector or thermostat). Commands the 3 fan speeds and must be installed on each fan coil within the network; receives the commands from the selector or the SIT5 card. In case you decide to install Aermec thermostats and current absorbed by the unit exceeds 0.7 A, you're obliged to include SIT3 accessory.

**SIT5:** Thermostat Interface Card allowing the creation of a network of fan coils (max. 10) commanded by a central control panel. Commands the 3 fan speeds and up to 2 valves (four pipe systems); sends the thermostat's commands to the fan coil network.

**SW3:** Water probe (L = 2.5 m) for controlling the minimum and maximum and to allow automatic seasonal switching for electronic thermostats fitted with water side changeover.

**SW5:** water probe kit (L = 15m) with probe-holder connection point, fixing clip and probe-holder from heat exchanger.

**T-TOUCH:** Touch control on board the machine, for controlling fan coils with asynchronous motors. In 2-pipe systems, it can control standard fan coils or those equipped with an electric heater, with air purifying devices or with FCZ-D twin delivery (Dualjet). In 4-pipe systems, only standard fan coils.

**TX:** Wall-mounting thermostat for controlling either brushless fan coils or those with asynchronous motors for 2/4 pipe. In 2-pipe systems, the thermostat can control standard fan coils or those equipped with an electric heater, with air purifying devices, radiant plate or FCZ-D twin delivery (Dualjet).

**TXB:** Wall-mounting thermostat for controlling either brushless fan coils or those with asynchronous motors for 2/4 pipe. In 2-pipe systems, the thermostat can control standard fan coils or those equipped with an electric heater, with air purifying devices, radiant plate or FCZ-D twin delivery (Dualjet).

**WMT05:** Electronic thermostat with thermostated ventilation.

**WMT06:** Electronic thermostat with continuous ventilation.

**WMT10:** Electronic thermostat, white, with thermostated or continuous ventilation.

### VMF system

**VMF-E0X:** Thermostat to be secured to the side of the fan coil, fitted as standard with an air probe and a water probe.

**VMF-E19:** Thermostat to be secured to the side of the fan coil, fitted as standard with an air probe and a water probe.

**VMF-E2Z:** User interface on the machine, to be combined with the VMF-E0X, VMF-E19 or VMF-E19I accessory.

**VMF-E3:** Wall mounted user interface, to be combined with accessories VMF-E19, VMF-E19I, VMF-E0X with grids GLF\_N/M and GLL\_N, can be controlled with VMF-IR control.

**VMF-E4DX:** Wall-mounted user interface. Grey front panel PANTONE 425C (METAL).

**VMF-E4X:** Wall-mounted user interface. Light grey front panel PANTONE COOL GRAY 1C.

**VMF-IR:** User interface compatible with the AER503IR, VMF-E3 thermostat and with all the grids of cassettes equipped with the infrared receiver compatible with the VMF system.

**VMF-SW:** Water probe (L = 2.5m) used if required in place of the standard unit supplied with the VMF-E0X, VMF-E19 and VMF-E19I thermostats for mounting it upstream of the valve

**VMF-SW1:** Additional water probe (L = 2.5m) to be used if required for 4-pipe systems with the VMF-E19 and VMF-E19I thermostats for maximum control in the cold range

**VMHI:** The VMHI panel can be used as a user interface for VMF-E0X/E19/E19I thermostats, GLFxN/M or GLLxN grids, or as an interface for the MZC system. What determines the function to be performed by the user interface is determined by its correct parametrisation and by following the electrical connections between interface and thermostat or interface and plenum.

### Water valves

**VCZ\_X:** 3-way valve kit for single-coil fan coil, RH connections, (VCZ\_X4R) or LH (VCZ\_X4L) for 4-pipe systems. With totally separate "heating" and "cooling" circuits. This kit consists of two 3-way insulated valves and four connections, complete with electrothermal actuators, insulating shells for the valves, and the relative hydraulic couplings. X4L version for fan coils with LH connections, and X4R for fan coils with RH connections. 230V~50Hz power supply.

**VCZ:** 3-way motorised valve kit. The kit consists of a valve with its insulating shell, an actuator and the relative pipe fittings. It can be installed on fan coils with both right and left connections. If the valve is combined with the BCZ5 or BCZ6 condensate drain pan, to ensure a better housing it is possible to remove the 3-way insulating shell. The kit consists of a valve with its insulating shell, an actuator and the relative pipe fittings. It can be installed on fan coils with both right and left connections. If the valve is combined with the BCZ5 or BCZ6 condensate drain pan, to ensure a better housing it is possible to remove the insulating shell.

**VCF44 - 45 - for the secondary coil:** The 3-way motorised valve kit for the secondary coil heat only. The kit consists of a valve with its insulating shell, actuator and relevant water fittings; it is suitable to be installed on the fan coils with right and left water connections.

**VCZD:** 2-way motorised valve kit. The kit consists of a valve, an actuator and the relative pipe fittings. It can be installed on fan coils with both right and left connections.

**VJP:** Control and balancing combination valve for 2 and 4 pipe systems to install outside the unit, supplied without fittings and hydraulic components. The valve, which can guarantee a constant water flow rate in the terminal, within its operating range.

### (Heating only) additional coil

**BV:** Single row hot water heat exchanger.

**RX:** Armoured electric coil with safety thermostat.

## Installation accessories

**PCZ:** Metal panel for the unit rear closing. SPCZ brackets are necessary to fix floor standing fan coils.

**GA:** Lower intake grille for encapsulated fan coils. Can also be used in wall-mounted or floor installations, the FIKIT accessory is needed only in the case of floor installation.

**FIKIT:** Metal supports for vertical installation of the GA grille.

**DSCZ4:** Condensate drainage device.

**BCZ:** Condensate drip. If the valve is paired with the BCZ5 or BCZ6 condensate drip tray, the insulating shell can be removed to ensure better housing.

**AMP:** Wall mounting kit

## ACCESSORIES COMPATIBILITY

### Control panels

Model	Ver	100	101	102	150	200	201	202	250
AER503IR (1)	AF,UF	.			.	.	.	.	.
	AS,U,UA	.	.	.	.	.	.	.	.
PX2Z	AF,UF	.			.	.			.
	AS,U	.	.	.	.	.	.	.	.
SA5 (2)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
SIT3 (3)	AS,U,UA	.	.	.	.	.	.	.	.
SIT5 (4)	AS,U,UA	.	.	.	.	.	.	.	.
SW3 (2)	AF,AS,UF	.			.	.			.
	U,UA	.	.	.	.	.	.	.	.
SW5 (2)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
T-TOUCH (5)	AF,UF	.			.	.			.
	AS,U	.	.	.	.	.	.	.	.
TX (1)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
TXB (5)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
WMT05 (1)	AF,AS,U,UA,UF	.			.	.			.
WMT06 (1)	AF,UF	.			.	.			.
	AS,U	.	.	.	.	.	.	.	.
WMT10 (1)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
Model	Ver	300	301	302	350	400	401	402	450
AER503IR (1)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
PX2Z	AF,UF	.			.	.			.
	AS,U	.	.	.	.	.	.	.	.
SA5 (2)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
SIT3 (3)	AS,U,UA	.	.	.	.	.	.	.	.
SIT5 (4)	AS,U,UA	.	.	.	.	.	.	.	.
SW3 (2)	AF,AS,UF	.			.	.			.
	U,UA	.	.	.	.	.	.	.	.
SW5 (2)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
T-TOUCH (5)	AF,UF	.			.				.
	AS,U	.	.	.	.	.	.	.	.
TX (1)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
TXB (5)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
WMT05 (1)	AF,AS,U,UA,UF	.			.	.			.
WMT06 (1)	AF,UF	.			.	.			.
	AS,U	.	.	.	.	.	.	.	.
WMT10 (1)	AF,UF	.			.	.			.
	AS,U,UA	.	.	.	.	.	.	.	.
Model	Ver	500	501	502	550	600	601	602	650
AER503IR (1)	AF,UF	.			.				.
	AS,U,UA	.	.	.	.	.	.	.	.
PX2Z	AF,UF	.			.				.
	AS,U	.	.	.	.	.	.	.	.
SA5 (2)	AF,UF	.			.				.
	AS,U,UA	.	.	.	.	.	.	.	.
SIT3 (3)	AS,U,UA	.	.	.	.	.	.	.	.
SIT5 (4)	AS,U,UA	.	.	.	.	.	.	.	.
SW3 (2)	AF,UF	.			.				.
	AS	.			.	.	.	.	.
SW5 (2)	U,UA	.	.	.	.	.	.	.	.
	AF,UF	.			.	.	.	.	.
SW5 (2)	AS,U,UA	.	.	.	.	.	.	.	.

Model	Ver	500	501	502	550	600	601	602	650
T-TOUCH (5)	AF,UF	•			•				
	AS,U	•	•	•	•	•	•	•	•
TX (1)	AF,UF	•			•				
	AS,U,UA	•	•	•	•	•	•	•	•
TXB (5)	AF,UF	•			•				
	AS,U,UA	•	•	•	•	•	•	•	•
WMT05 (1)	AF,UF	•			•				
	AS,U,UA	•			•				•
WMT06 (1)	AF,UF	•			•		•	•	•
	AS,U	•	•	•	•	•	•	•	•
WMT10 (1)	AF,UF	•			•		•	•	•
	AS,U,UA	•	•	•	•	•	•	•	•
Model	Ver	700	701	702	750	800	801	802	850
AER503IR (1)	AS,U,UA	•	•	•	•	•	•	•	•
PX2Z	AS,U	•	•	•	•	•	•	•	•
SA5 (2)	AS,U,UA	•	•	•	•	•	•	•	•
SIT3 (3)	AS,U,UA	•	•	•	•	•	•	•	•
SIT5 (4)	AS,U,UA	•	•	•	•	•	•	•	•
SW3 (2)	AS,U,UA	•	•	•	•	•	•	•	•
SW5 (2)	AS,U,UA	•	•	•	•	•	•	•	•
T-TOUCH (5)	AS,U	•	•	•	•	•	•	•	•
TX (1)	AS,U,UA	•	•	•	•	•	•	•	•
TXB (5)	AS,U,UA	•	•	•	•	•	•	•	•
WMT05 (1)	AS,U,UA	•			•	•			•
WMT06 (1)	AS,U	•	•	•	•	•	•	•	•
WMT10 (1)	AS,U,UA	•	•	•	•	•	•	•	•
Model	Ver	900	901	950	1000	1001			
AER503IR (1)	AF,UF			•	•				
	AS,U,UA	•	•	•	•	•			
PX2Z	AF,UF				•				
	AS,U	•	•	•	•	•			
SA5 (2)	AF,UF				•				
	AS,U,UA	•	•	•	•	•			
SIT3 (3)	AF,UF					•			
	AS,U,UA	•	•	•	•	•			
SIT5 (4)	AF,UF					•			
	AS,U,UA	•	•	•	•	•			
SW3 (2)	AS	•	•	•	•	•			
	U,UA	•	•	•	•	•			
SW5 (2)	AF,UF					•			
	AS,U,UA	•	•	•	•	•			
T-TOUCH (5)	AF,UF	•			•	•			
	AS,U	•	•	•	•	•			
TX (1)	AF,UF				•	•			
	AS,U,UA	•	•	•	•	•			
TXB (5)	AF,UF	•			•	•			
	AS,U,UA	•	•	•	•	•			
WMT05 (1)	AF,AS,U,UA,UF	•			•	•			
WMT06 (1)	AF,UF	•			•	•			
WMT10 (1)	AS,U	•	•	•	•	•			
	AF,UF	•			•	•			
	AS,U,UA	•	•	•	•	•			

(1) Wall-mounting. If the unit intake exceeds 0.7A, or several units need to be managed with a single thermostat, board SIT3 and/or SIT5 is required.

(2) Probe for AER503IR-TX thermostats, if fitted.

(3) Cards for AER503IR-TX thermostats, if present, to be installed if the unit absorption exceeds 0.7 Ampere.

(4) Probe for AER503IR-TX thermostats, if fitted.

(5) Installation on the fan coil.

### VMF system

For more information about VMF system, refer to the dedicated documentation.

### VMF system

Model	Ver	100	101	102	150	200	201	202	250	300	301
VMF-E0X (1)	AF,UF	•			•	•			•	•	
	AS,U,UA	•	•	•	•	•	•	•	•	•	•
VMF-E19 (1)	AF,UF	•			•	•			•	•	
	AS,U,UA	•	•	•	•	•	•	•	•	•	•
VMF-E2Z	AF,UF	•			•	•			•	•	
	AS,U,UA	•	•	•	•	•	•	•	•	•	•

Model	Ver	100	101	102	150	200	201	202	250	300	301
VMF-E3	AF,UF	.			.	.			.	.	
	U,UA	.	.	.	.	.	.	.	.	.	.
VMF-E4DX	AF,UF	.			.	.			.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
VMF-E4X	AF,UF	.			.	.			.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
VMF-IR	AF,UF	.			.	.			.	.	
	U,UA	.	.	.	.	.	.	.	.	.	
VMF-SW	AF,UF	.			.	.			.	.	
	AS,U	.	.	.	.	.	.	.	.	.	
VMF-SW1	AF,UF	.			.	.			.	.	
	AS,U	.	.	.	.	.	.	.	.	.	
VMHI	AF,UF	.			.	.			.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
Model	Ver	302	350	400	401	402	450	500	501	502	550
VMF-EOX (1)	AF,UF	.	.			.	.	.	.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
VMF-E19 (1)	AF,UF	.	.			.	.	.	.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
VMF-E2Z	AF,UF	.	.	.		.	.	.	.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
VMF-E3	AF,UF	.	.			.	.	.	.	.	
	U,UA	.	.	.	.	.	.	.	.	.	
VMF-E4DX	AF,UF	.	.			.	.	.	.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
VMF-E4X	AF,UF	.	.			.	.	.	.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
VMF-IR	AF,UF	.	.			.	.	.	.	.	
	U,UA	.	.	.	.	.	.	.	.	.	
VMF-SW	AF,UF	.	.			.	.	.	.	.	
	AS,U	.	.	.	.	.	.	.	.	.	
VMF-SW1	AF,UF	.	.			.	.	.	.	.	
	AS,U	.	.	.	.	.	.	.	.	.	
VMHI	AF,UF	.	.			.	.	.	.	.	
	AS,U,UA	.	.	.	.	.	.	.	.	.	
Model	Ver	600	601	602	650	700	701	702	750	800	801
VMF-EOX (1)	AS,UA	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMF-E19 (1)	AS,UA	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMF-E2Z	AS,UA	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMF-E3	AF,UF	.			.	.			.	.	
	U,UA	.	.	.	.	.	.	.	.	.	
VMF-E4DX	AS,UA	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMF-E4X	AS,UA	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMF-IR	AF,UF	.			.	.			.	.	
	U,UA	.	.	.	.	.	.	.	.	.	
VMF-SW	AS	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMF-SW1	AS	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMHI	AS,UA	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
Model	Ver	802	850	900	901	950	1000	1001			
VMF-EOX (1)	AF,UF					.					
	AS,UA	.	.	.	.	.	.	.	.	.	
VMF-E19 (1)	U	.		.	.	.	.	.	.	.	
	AF,UF					.					
VMF-E2Z	AS,UA	.	.	.	.	.	.	.	.	.	
	U	.	.	.		.	.	.	.	.	
VMF-E3	AF	.		.		.		.			
	U,UA	.	.	.		.	.	.	.	.	
VMF-E4X	UF	.		.		.		.			

Model	Ver	802	850	900	901	950	1000	1001
	AF,UF					.		
VMF-E4DX	AS,UA	.	.	.	.	.	.	.
	U	.		.	.	.	.	.
	AF,UF					.		
VMF-E4X	AS,UA	.	.	.	.	.	.	.
	U	.		.	.	.	.	.
	AF	.	.	.	.			
VMF-IR	U,UA	.	.	.	.	.	.	.
	UF	.		.	.	.	.	.
	AF,UF					.		
VMF-SW	AS	.	.	.	.	.	.	.
	U	.		.	.	.	.	.
	AF,UF					.		
VMF-SW1	AS	.	.	.	.	.	.	.
	U	.		.	.	.	.	.
	AF,UF					.		
VMHI	AS,UA	.	.	.	.	.	.	.
	U	.		.	.	.	.	.

(1) Also the accessory VMF-SIT3V is mandatory if the unit exceeds 0.7 Amperes.

## Water valves

### 3 way valve kit

	100	101	102	150	200	201	202	250	300	301	302	350	400	401	402	450
<b>Main coil</b>	VCZ41	VCZ42														
	VCZ4124	VCZ4224														
<b>Secondary coil</b>	-	VCF44	VCF44	-												
	-	VCF4424	VCF4424	-												
<b>Additional coil "BV"</b>	-	-	-	VCF44	-	-	-	VCF44	-	-	-	VCF44	-	-	-	-
	-	-	-	VCF4424	-	-	-	VCF4424	-	-	-	VCF4424	-	-	-	-
	500	501	502	550	600	601	602	650	700	701	702	750	800	801	802	850
<b>Main coil</b>	VCZ42															
	VCZ4224															
<b>Secondary coil</b>	-	VCF44	VCF44	-												
	-	VCF4424	VCF4424	-												
<b>Additional coil "BV"</b>	-	-	-	VCF44	-	-	-	VCF44	-	-	-	VCF44	-	-	-	-
	-	-	-	VCF4424	-	-	-	VCF4424	-	-	-	VCF4424	-	-	-	-
	900	901	950	1000	1001											
<b>Main coil</b>	VCZ43	VCZ43	VCZ43	VCZ43	VCZ43											
	VCZ4324	VCZ4324	VCZ4324	VCZ4324	VCZ4324											
<b>Secondary coil</b>	-	VCF45	VCF45	-												
	-	VCF4524	VCF4524	-												
<b>Additional coil "BV"</b>	-	VCF45	VCF45	-												

### 2 way valve kit

	100	101	102	150	200	201	202	250	300	301	302	350	400	401	402	450
<b>Main coil</b>	VCZD1	VCZD2														
	VCZD124	VCZD224														
<b>Secondary coil</b>	-	VCFD4	VCFD4	-												
	-	VCFD424	VCFD424	-												
<b>Additional coil "BV"</b>	-	VCFD4	VCFD4	-												
	-	VCFD424	VCFD424	-												
	500	501	502	550	600	601	602	650	700	701	702	750	800	801	802	850
<b>Main coil</b>	VCZD2															
	VCZD224															
<b>Secondary coil</b>	-	VCFD4	VCFD4	-												
	-	VCFD424	VCFD424	-												
<b>Additional coil "BV"</b>	-	VCFD4	VCFD4	-												
	-	VCFD424	VCFD424	-												
	900	901	950	1000	1001											
<b>Main coil</b>	VCZD3	VCZD3	VCZD3	VCZD3	VCZD3											
	VCZD324	VCZD324	VCZD324	VCZD324	VCZD324											
<b>Secondary coil</b>	-	VCFD4	VCFD4	-												
	-	VCFD424	VCFD424	-												
<b>Additional coil "BV"</b>	-	VCFD4	VCFD4	-												
	-	VCFD424	VCFD424	-												

**Valve Kit for 4 pipe systems - Requires a thermostat with valve management**

Model	Ver	100	101	102	150	200	201	202	250
VCZ1X4L (1)	A,AS,U,UA,UF	•			•	•			•
VCZ1X4R (1)	A,AS,U,UA,UF	•			•	•			•
Model	Ver	300	301	302	350	400	401	402	450
VCZ2X4L (1)	A,AS,U,UA,UF	•			•	•			•
VCZ2X4R (1)	A,AS,U,UA,UF	•			•	•			•
Model	Ver	500	501	502	550	600	601	602	650
VCZ2X4L (1)	AF,UF	•			•				
	AS,UA	•			•	•			•
VCZ2X4R (1)	AF,UF	•			•				•
	AS,UA	•			•	•			•
Model	Ver	700	701	702	750	800	801	802	850
VCZ2X4L (1)	AS,UA	•			•	•			•
VCZ2X4R (1)	AS,UA	•			•	•			•
Model	Ver	900	901	950		1000		1001	
VCZ3X4L (1)	A,AS,U,UA,UF	•		•		•			
VCZ3X4R (1)	A,AS,U,UA,UF	•		•		•			

(1) The valves can be combined with the units if there is a control panel for managing them.

**Combined Adjustment and Balancing Valve Kit**

Model	Ver	100	101	102	150	200	201	202	250
VJP060 (1)	ACT,APC	•			•	•			•
	AS,UA	•	•	•	•	•	•	•	•
VJP060M (2)	ACT,APC	•			•	•			•
	AS,UA	•	•	•	•	•	•	•	•
Model	Ver	300	301	302	350	400	401	402	450
VJP060 (1)	ACT,APC	•			•				
	AS,UA	•	•	•	•				
VJP060M (2)	ACT,APC	•			•				
	AS,UA	•	•	•	•				
VJP090 (1)	ACT,APC					•			•
	AS,UA					•	•	•	•
VJP090M (2)	ACT,APC					•			•
	AS,UA					•	•	•	•
Model	Ver	500	501	502	550	600	601	602	650
VJP090 (1)	ACT,APC	•			•	•			•
	AS,UA	•	•	•	•	•	•	•	•
VJP090M (2)	ACT,APC	•			•	•			•
	AS,UA	•	•	•	•	•	•	•	•
VJP150 (1)	ACT,APC					•			•
	AS,UA					•	•	•	•
VJP150M (2)	ACT,APC					•			•
	AS,UA					•	•	•	•
Model	Ver	700	701	702	750	800	801	802	850
VJP150 (1)	ACT,APC	•			•	•			•
	AS,UA	•	•	•	•	•	•	•	•
VJP150M (2)	ACT,APC	•			•	•			•
	AS,UA	•	•	•	•	•	•	•	•
Model	Ver	900	901	950		1000		1001	
VJP150 (1)	ACT,APC	•		•		•			
	AS,UA	•	•	•		•			
VJP150M (2)	ACT,APC	•		•		•			
	AS,UA	•	•	•		•			

(1) 230V~50Hz

(2) 24V

**(Heating only) additional coil**

**Heating only additional coil**

Model	Ver	100	101	102	150	200	201	202	250
BV117 (1)	A,AF,AS,U,UA,UF	•							
BV122 (1)	A,AF,AS,U,UA,UF					•			
Model	Ver	300	301	302	350	400	401	402	450
BV132 (1)	A,AF,AS,U,UA,UF	•							
BV142 (1)	A,AF,AS,U,UA,UF					•			
Model	Ver	500	501	502	550	600	601	602	650
BV142 (1)	A,AF,AS,U,UA,UF	•							
BVZ800 (1)	A,AS,UA					•			

Model	Ver	700	701	702	750	800	801	802	850
BVZ800 (1)	A,AS,U,UA	.				.			
Model	Ver	900		901		950		1000	1001
BV162 (1)	A,AF,AS,U,UA,UF	.					.		

(1) Not available for sizes with oversized main coil.

#### **Electric coil - Requires a thermostat with heater management. Not available for sizes with an oversized main coil.**

Model	Ver	100	101	102	150	200	201	202	250
RX17 (1)	A,AS,U,UA,UF	.							
RX22 (1)	A,AS,U,UA,UF					.			
Model	Ver	300	301	302	350	400	401	402	450
RX32 (1)	A,AS,U,UA,UF	.							
RX42 (1)	A,AS,U,UA,UF					.			
Model	Ver	500	501	502	550	600	601	602	650
RX52 (1)	A,AS,U,UA,UF	.							
RXZ800 (1)	AS,U,UA					.			
Model	Ver	700	701	702	750	800	801	802	850
RXZ800 (1)	AS,U,UA	.				.			
Model	Ver	900		901		950		1000	1001
RX62 (1)	A,AS,U,UA,UF	.					.		

(1) It requires a thermostat with heater management and the units without a housing also require the PCR1 or PCR2 accessory, depending on the unit. The heater is not available for sizes with a larger main battery.

#### **Installation accessories**

##### **Wall mounting kit**

Ver	100	101	102	150	200	201	202	250
U,UA	AMP20							
UF	AMP20	-	-	AMP20	AMP20	-	-	AMP20
Ver	300	301	302	350	400	401	402	450
U,UA	AMP20							
UF	AMP20	-	-	AMP20	AMP20	-	-	AMP20
Ver	500	501	502	550	600	601	602	650
U,UA	AMP20	AMP20	AMP20	AMP20	AMPZ	AMPZ	AMPZ	AMPZ
UF	AMP20	-	-	AMP20	-	-	-	-

The accessory cannot be fitted on the configurations indicated with -

Ver	700	701	702	750	800	801	802	850
U,UA	AMPZ							
Ver	900		901		950		1000	1001
U,UA	AMPZ		AMPZ		AMPZ		AMPZ	

##### **Condensate recirculation device**

Model	Ver	100	101	102	150	200	201	202	250
DSCZ4 (1)	A,AS,U,UA	.	.	.	.	.	.	.	.
	ACT,APC	.			.	.			
Model	Ver	300	301	302	350	400	401	402	450
DSCZ4 (1)	A,AS,U,UA	.	.	.	.	.	.	.	.
	ACT,APC	.			.	.			
Model	Ver	500	501	502	550	600	601	602	650
DSCZ4 (1)	A,AS,U,UA	.	.	.	.	.	.	.	.
	ACT,APC	.			.	.			
Model	Ver	700	701	702	750	800	801	802	850
DSCZ4 (1)	A,AS,U,UA	.	.	.	.	.	.	.	.
	ACT,APC	.			.	.			
Model	Ver	900		901		950		1000	1001
DSCZ4 (1)	A,AS,U,UA	.		.		.		.	
	ACT,APC	.			.	.			

(1) DSC4 cannot be mounted if even just one of these accessories is also installed: AMP - AMPZ valve VCZ1-2-3-4 X4L/R and all the condensate collection trays.

##### **Condensate drip**

Model	Ver	100	101	102	150	200	201	202	250
BCZ4 (1)	A,AS,U,UA	.	.	.	.	.	.	.	.
	ACT,APC	.			.	.			
BCZ5 (2)	A,AS,U,UA	.	.	.	.	.	.	.	.
	ACT,APC	.			.	.			
Model	Ver	300	301	302	350	400	401	402	450
BCZ4 (1)	A,AS,U,UA	.	.	.	.	.	.	.	.
	ACT,APC	.			.	.			

Model	Ver	300	301	302	350	400	401	402	450
BCZ5 (2)	A,AS,U,UA	•	•	•	•	•	•	•	•
	ACT,APC	•			•	•			•
Model	Ver	500	501	502	550	600	601	602	650
BCZ4 (1)	A,AS,U,UA	•	•	•	•	•	•	•	•
	ACT,APC	•			•	•			•
BCZ5 (2)	A,AS,U,UA	•	•	•	•	•	•	•	•
	ACT,APC	•			•	•			•
Model	Ver	700	701	702	750	800	801	802	850
BCZ4 (1)	A,AS,U,UA	•	•	•	•	•	•	•	•
	ACT,APC	•			•	•			•
BCZ6 (2)	A,AS,U,UA	•	•	•	•	•	•	•	•
	ACT,APC	•			•	•			•
Model	Ver	900	901		950		1000		1001
BCZ4 (1)	A,AS,U,UA	•	•		•		•		•
	ACT,APC	•			•		•		•
BCZ6 (2)	A,AS,U,UA	•	•		•		•		•
	ACT,APC	•			•		•		•

(1) For vertical installation.

(2) For horizontal installation.

#### **Panel closing the rear of the unit**

Model	Ver	100	101	102	150	200	201	202	250
PCZ100	A,AS,U,UA	•	•	•	•				
	ACT,APC	•			•				
PCZ200	A,AS,U,UA					•	•	•	•
	ACT,APC					•			
Model	Ver	300	301	302	350	400	401	402	450
PCZ300	A,AS,U,UA	•	•	•	•				
	ACT,APC	•			•				
PCZ500	A,AS,U,UA					•	•	•	•
	ACT,APC					•			
Model	Ver	500	501	502	550	600	601	602	650
PCZ500	A,AS,U,UA	•	•	•	•				
	ACT,APC	•			•				
PCZ800	A,AS,U,UA					•	•	•	•
	ACT,APC					•			
Model	Ver	700	701	702	750	800	801	802	850
PCZ800	A,AS,U,UA	•	•	•	•	•	•	•	•
	ACT,APC	•			•	•			•
Model	Ver	900		901		950		1000	1001
PCZ1000	A,AS,U,UA	•		•		•		•	•
	ACT,APC	•				•			•

#### **Lower intake grille**

Model	Ver	100	101	102	150	200	201	202	250
GA100	U,UA	•	•	•	•				
	U,UA					•	•	•	•
Model	Ver	300	301	302	350	400	401	402	450
GA300	U,UA	•	•	•	•				
	U,UA					•	•	•	•
Model	Ver	500	501	502	550	600	601	602	650
GA500	U,UA	•	•	•	•				
	U,UA					•	•	•	•
Model	Ver	700	701	702	750	800	801	802	850
GA800	U,UA	•	•	•	•	•	•	•	•
	U,UA					•			•
Model	Ver	900		901		950		1000	1001
GA800	U,UA	•		•		•		•	•

#### **Supports to be combined with the ornamental grille (GA) for floor installation of the fan coil**

Model	Ver	100	101	102	150	200	201	202	250
FIKIT100	A,AS,U,UA	•	•	•	•				
	ACT,AF,APC,UF	•			•				
FIKIT200	A,AS,U,UA					•	•	•	•
	ACT,AF,APC,UF					•			•
Model	Ver	300	301	302	350	400	401	402	450
FIKIT300	A,AS,U,UA	•	•	•	•				
	ACT,AF,APC,UF	•			•				

Model	Ver	300	301	302	350	400	401	402	450
FIKIT500	A,AS,UA ACT,AF,APC,UF					.	.	.	.
FIKIT500	A,AS,UA ACT,AF,APC,UF	.	.	.	.	.	.	.	.
FIKIT800	A,AS,UA ACT,APC					.	.	.	.
FIKIT800	ACT,APC	.	.	.	.	.	.	.	.
Model	Ver	700	701	702	750	800	801	802	850
FIKIT800	ACT,APC	.	.	.	.	.	.	.	.
FIKIT800	U,UA	.	.	.	.	.	.	.	.
Model	Ver	900	901	950	1000	1001			
FIKIT800	A,AS,UA,UA ACT,AF,APC,UF	.	.	.	.	.	.	.	.
FIKIT800	ACT,APC	.	.	.	.	.	.	.	.

#### Pair of stylish structural feet

Model	Ver	100	101	102	150	200	201	202	250
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
Model	Ver	300	301	302	350	400	401	402	450
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
Model	Ver	500	501	502	550	600	601	602	650
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
Model	Ver	700	701	702	750	800	801	802	850
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.
Model	Ver	900	901	950	1000				
ZXZ	A,AS,UA,UA ACT,APC	.	.	.	.	.	.	.	.

#### PERFORMANCE SPECIFICATIONS

2-pipe

	FCZ100	FCZ150	FCZ200	FCZ250	FCZ300	FCZ350	FCZ400	FCZ450	FCZ500	FCZ550	
	1 2 3	1 2 3	1 2 3	1 2 3	1 2 3	1 2 3	1 2 3	1 2 3	1 2 3	1 2 3	
	L M H	L M H	L M H	L M H	L M H	L M H	L M H	L M H	L M H	L M H	
Heating performance 70 °C / 60 °C (1)											
Heating capacity	kW	1,45 2,00 2,40	1,55 2,19 2,65	2,02 2,95 3,70	2,20 3,18 4,05	3,47 4,46 5,50	3,77 4,92 6,15	4,32 5,74 7,15	4,57 6,29 7,82	5,27 7,31 8,50	5,82 8,34 9,75
Water flow rate system side	l/h	125 172 206	136 192 232	177 258 324	193 278 355	304 391 482	330 431 539	379 503 627	400 551 685	462 641 745	510 731 855
Pressure drop system side	kPa	4 7 9	5 9 12	6 12 18	7 15 23	7 12 18	8 14 20	9 16 24	6 11 16	12 21 28	10 20 26
Heating performance 45 °C / 40 °C (2)											
Heating capacity	kW	0,72 0,99 1,19	0,77 1,09 1,31	1,00 1,46 1,84	1,09 1,58 2,01	1,72 2,21 2,73	1,87 2,44 3,06	2,14 2,85 3,55	2,27 3,12 3,88	2,62 3,63 4,22	2,89 4,14 4,85
Water flow rate system side	l/h	126 173 207	134 189 229	174 254 319	190 274 350	299 385 475	325 425 531	373 495 617	394 543 675	455 631 734	502 720 842
Pressure drop system side	kPa	4 7 10	5 9 12	6 12 18	8 15 22	8 12 18	8 14 20	10 16 24	6 11 16	12 21 28	10 20 26
Cooling performance 7 °C / 12 °C (3)											
Cooling capacity	kW	0,65 0,84 1,00	0,80 1,06 1,27	0,89 1,28 1,60	1,06 1,55 1,94	1,68 2,17 2,65	1,89 2,46 3,02	2,20 2,92 3,60	2,41 3,21 4,03	2,68 3,69 4,25	2,91 4,13 4,79
Sensible cooling capacity	kW	0,51 0,69 0,83	0,57 0,80 0,97	0,71 1,05 1,33	0,79 1,20 1,52	1,26 1,65 2,04	1,33 1,76 2,18	1,59 2,14 2,67	1,69 2,30 2,90	1,94 2,73 3,18	2,07 2,98 3,49
Water flow rate system side	l/h	112 144 172	138 182 219	153 221 275	182 267 334	288 374 456	350 460 560	379 503 619	414 552 694	460 634 731	501 711 824
Pressure drop system side	kPa	4 6 8	6 12 13	6 12 18	8 17 25	8 13 18	11 18 25	10 16 24	9 15 22	13 22 29	12 22 28
Fan											
Type	type					Centrifugal					
Fan motor	type					Asynchronous					
Number	no.	1	1	1	1	2	2	2	2	2	
Air flow rate	m³/h	110 160 200	110 160 200	140 220 290	140 220 290	260 350 450	260 350 450	330 460 600	400 600 720	400 600 720	
Input power	W	19 29 35	19 29 35	25 29 33	25 29 33	44 25 33	44 25 33	40 30 43	57 30 43	57 38 52	
Electrical wiring	V1 V2 V3	V1 V2 V3	V1 V2 V3	V1 V2 V3	V1 V2 V3	V1 V2 V3	V1 V2 V3	V1 V2 V3	V1 V2 V3	V1 V2 V3	
Fan coil sound data (4)											
Sound power level	dB(A)	31,0 38,0 45,0	31,0 38,0 45,0	35,0 46,0 51,0	35,0 46,0 51,0	34,0 41,0 48,0	34,0 41,0 48,0	37,0 44,0 51,0	37,0 44,0 51,0	42,0 51,0 56,0	
Sound pressure	dB(A)	23,0 30,0 37,0	23,0 30,0 37,0	27,0 38,0 43,0	27,0 38,0 43,0	26,0 33,0 40,0	26,0 33,0 40,0	29,0 36,0 43,0	29,0 36,0 43,0	34,0 43,0 48,0	
Diametre hydraulic fittings											
Main coil	Ø	1/2"	1/2"	1/2"	1/2"	3/4"	3/4"	3/4"	3/4"	3/4"	
Power supply						230V~50Hz					
Power supply											

(1) Boom air temperature 20 °C d.b.: Water (in/out) 70 °C/60

(2) Room air temperature 20°C d.b.; Water (in/out) 45°C/40°C; EUROVENT

(3) Room air temperature 27°C d.b./19°C w.b.; Water (in/out) 7 °C/12 °C; EUROVENT

(4) Aermec determines the sound power value on the basis of measurements taken in accordance with standard UNI EN 16583:15, respecting the Eurovent certification.


## 4-pipe

(1) Room air temperature 20 °C d.b.: Water (in/out) 65 °C/55 °C: EUROVENT

(1) Room air temperature 20 °C d.b., Water (in/out) 65 °C/55 °C; EUROVENT  
 (2) Room air temperature 27°C d.b./19°C w.b.; Water (in/out) 7 °C/12 °C; EUROVENT

(3) Aermec determines the sound power value on the basis of measurements taken in accordance with standard UNI EN 16583:15, respecting the Eurovent certification.

## DIMENSIONS

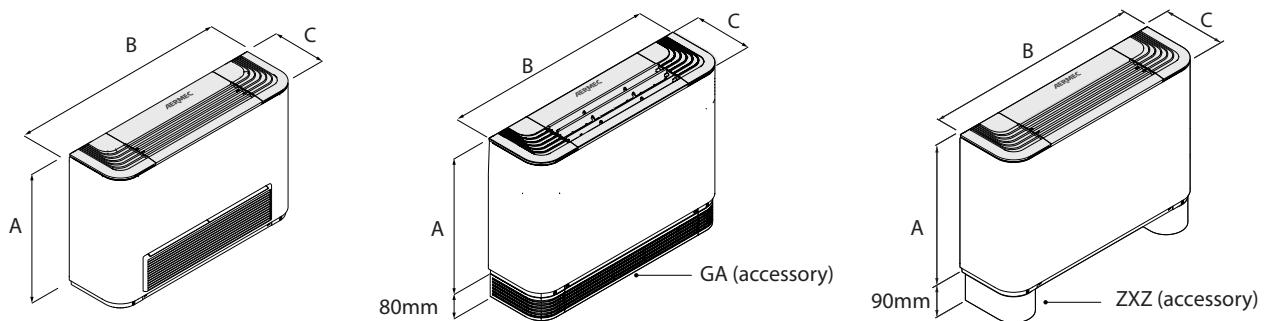

	FCZ100	FCZ101	FCZ102	FCZ150	FCZ200	FCZ201	FCZ202	FCZ250	FCZ300	FCZ301	FCZ302	FCZ350	FCZ400	FCZ401	FCZ402	FCZ450	
Dimensions and weights																	
A	mm	486	486	486	486	486	486	486	486	486	486	486	486	486	486	486	
B	mm	640	640	640	640	750	750	750	980	980	980	1200	1200	1200	1200	1200	
C	mm	220	220	220	220	220	220	220	220	220	220	220	220	220	220	220	
Empty weight	kg	13	14	14	14	15	15	16	16	17	18	19	19	23	23	24	
	FCZ500	FCZ501	FCZ502	FCZ550	FCZ600	FCZ601	FCZ602	FCZ650	FCZ700	FCZ701	FCZ702	FCZ750	FCZ800	FCZ801	FCZ802	FCZ850	
Dimensions and weights																	
A	mm	486	486	486	486	486	486	486	486	486	486	486	486	486	486	486	
B	mm	1200	1200	1200	1200	1320	1320	1320	1320	1320	1320	1320	1320	1320	1320	1320	
C	mm	220	220	220	220	220	220	220	220	220	220	220	220	220	220	220	
Empty weight	kg	24	22	23	24	24	29	31	33	29	31	33	33	29	29	31	33
	FCZ900	FCZ901	FCZ950	FCZ1000	FCZ1001												
Dimensions and weights																	
A	mm		591		591			591		591		591		591		591	
B	mm		1320		1320			1320		1320		1320		1320		1320	
C	mm		220		220			220		220		220		220		220	
Empty weight	kg		34		34			34		34		34		34		34	

Aermec reserves the right to make any modifications deemed necessary.  
All data is subject to change without notice. Aermec does not assume responsibility or liability for errors or omissions.

**Aermec S.p.A.**  
Via Roma, 996 - 37040 Bevilacqua (VR) - Italia  
Tel. 0442633111 - Telefax 044293577  
[www.aermec.com](http://www.aermec.com)